

< i > infobit iSpeaker A20




Smart Conference Speakerphone Instruction Manual

< i > infobit iSpeaker A20




智能会议麦克风音箱使用说明书

1 Product List

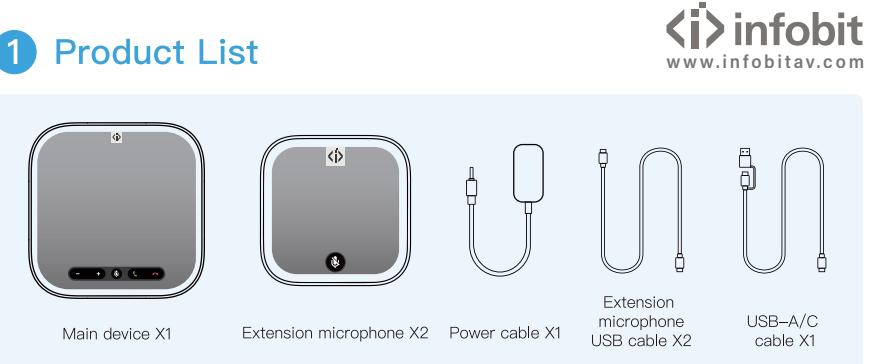


< i > infobit
www.infobitav.com

2 Product Description

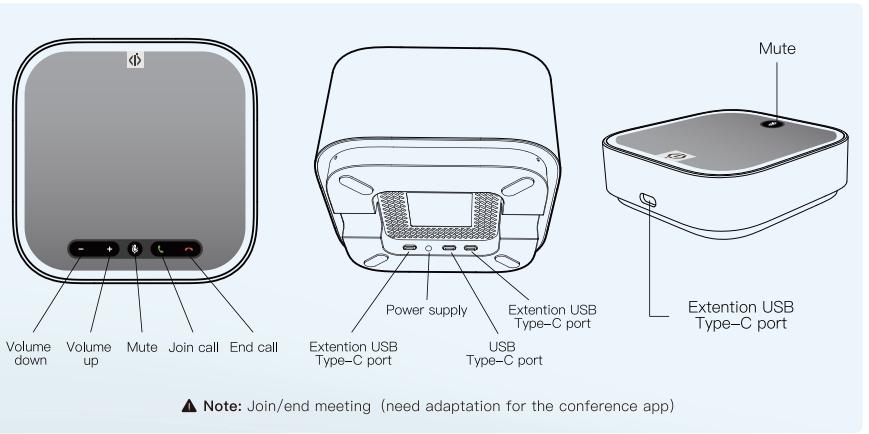


1 产品清单

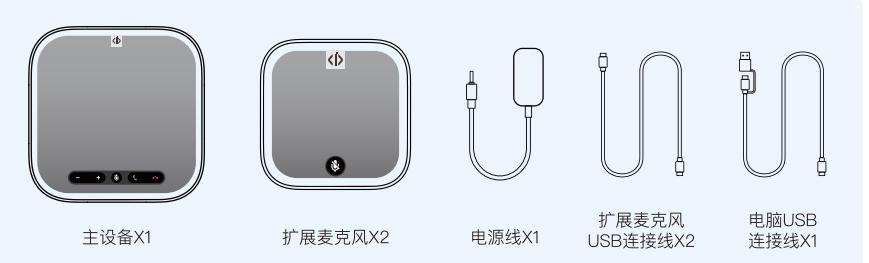

< i > infobit
www.infobitav.com

2 产品介绍

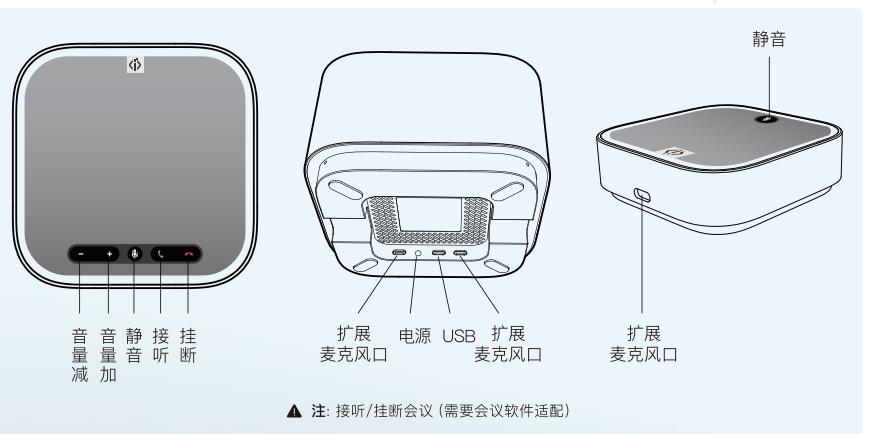


▲ 注: 接听/挂断会议 (需要会议软件适配)

3 Quick Start Meeting Guide

(1) Connect the USB port

- ① Use the Power cable to connect the Speakerphone to the power supply.
- ② Use the USB-A/C cable to connect the computer to the Speakerphone.

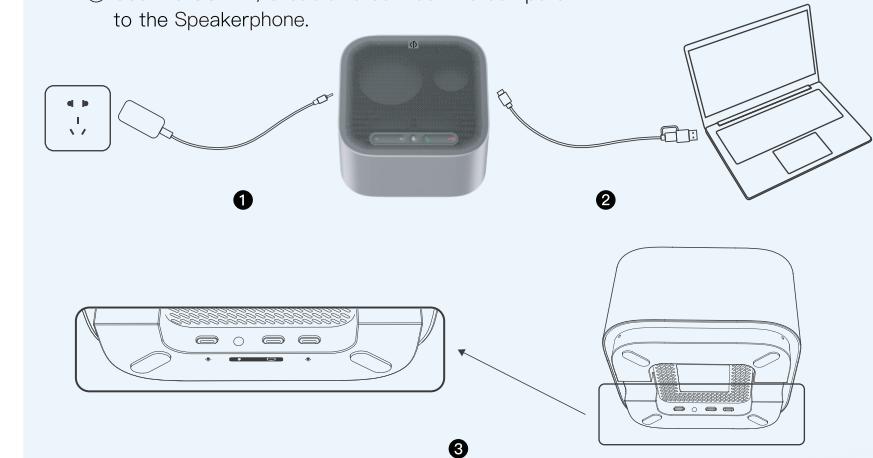

- ③ After the green light of Speakerphone is on, it can be used normally.
- ④ In the configuration of computer sound device or conference software, make sure that Speakerphone is selected. When selected, Speakerphone is ready to be used with conferencing software.

< i > infobit
www.infobitav.com

iSpeaker A20

(2) Connecting Extension Microphones

In order to get better audio quality for the multi-person conference scenario, you can use the extension microphone USB cable to connect two extension microphones.



4 Light indicator

Light indicator	Device status
Green	Microphone is working
Red	Microphone is muted
Orange	Booting up / Upgrading firmware
Clockwise rotation	Connecting to computer USB port
Counterclockwise rotation	Disconnecting to the computer USB port

2. 连接扩展麦克风

为了使得多人会议场景效果更佳, 您可以使用扩展麦克风USB连接线连接2个扩展麦克风。



4 指示灯状态含义

灯带状态	对应的设备状态
绿色	开机后, 非麦克风静音状态
红色	麦克风静音
橙色	开机启动中 / 固件升级中
顺时针转圈	连接电脑USB口
逆时针转圈	断开电脑USB口