


出血3mm  
成品版面尺寸: 80\*80mm

83mm  
80mm

## USER MANUAL

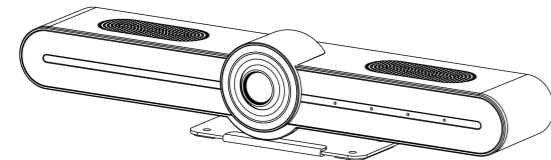


Please read the user manual carefully before using the product and keep it properly

### Package


Please check and see if all the items are complete.



### Appearance

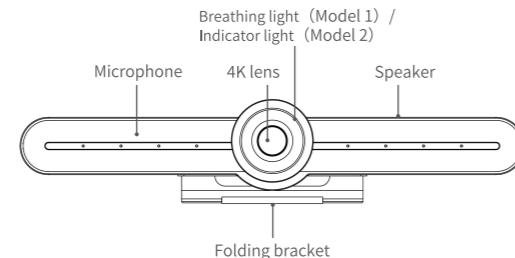

### Video ports

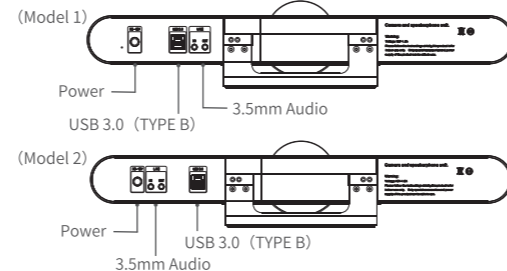

### Instructions


#### • Power on & off

Plug in the power supply according to the installation diagram, connect the USB3.0 cable to the PC, the breathing light will rotate in color (Model 1)/indicator Steady green (Model 2), indicating that the power has been connected and the self-check has been completed, then open the conference software to check whether the video is turned on.

#### • How to use the product

According to the instructions of the IR remote control, control the lens according to the requirement, open the conference software and start the audio and video conference.

### Instruction of remote control

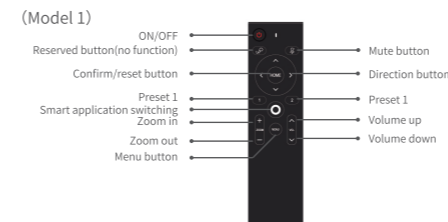


#### Button instructions

- If the button doesn't respond, please check if the positive and negative pole of battery is correct, and check the battery lifespan.
- Call presets: shortly press the preset 1 or 2 button.
- Preset position: press the preset button for 3 seconds, it will take effect.

#### Description of breathing light status

- If the device is running normally, then the breathing light is colored, and it is always red in the standby state.
- If the MIC is mute, then the breathing light is always on, showing pink.
- If the speaker is muted, then the breathing light is always on, showing yellow-green.
- If the MIC & speaker are muted at the same time, then the breathing light is always on and red.

### Instruction of remote control

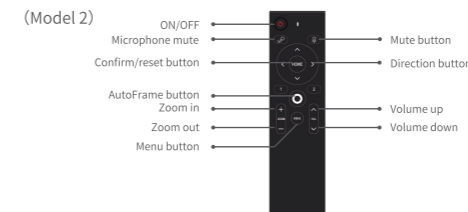

#### Button instructions

- If the button doesn't respond, please check if the positive and negative pole of battery is correct, and check the battery lifespan.
- Direction buttons: After the digital zoom function is turned on, the electronic pan/tilt can be operated by the direction keys.
- Zoom in/out: After the digital zoom function is turned on, you can zoom in/out the screen to zoom in and out.

#### Description of indicator light status

- If the device is running normally, then the indicator light is always green, and it is always red in the standby state.
- If the MIC is mute, then the indicator light is always on, showing blue.
- If the speaker is muted, then the indicator light is always on, showing cyan.
- If the MIC & speaker are muted at the same time, then the indicator light is always on and white.

### Specifications

Image Sensor	4K 1/2.8 CMOS sensor
Video Signal	4K、1080P、720P
Video Output	USB3.0, compatible with USB2.0
Horizontal View Angle	120° wide view angle (Model 1) 110° wide view angle (Model 2)
Auto Frame	Support(1080P)
Sound Tracking	Support (Model 1) No support (Model 2)
Color Space Compression	MJPG/YUY2/H.264/H.265
Power Consumption	DC 12V/1.5A
Interface	USB3.0(TYPE-B), compatible with USB2.0
Audio	Built in MIC and speaker, 3.5mm audio port
Dimension	(L)400*(W)70*(H)45mm Host (L)400*(W)92*(H)82mm Host with bracket
Weight	950g